


CSMIO/IP-S

The image shows several screenshots of the Mach4 Control Configuration software. The top row shows the 'General' tab for Motor 0, Motor 1, and Motor 2, with checkboxes for 'Enabled', 'Master', and 'Slave' configurations. The middle row shows velocity graphs for Motor 0, Motor 1, and Motor 2, with axes for Velocity (mm/s) and Time in Seconds. The bottom row shows the 'CSMIO/IP Controller Configuration' settings for Motor 0, Motor 1, and Motor 2, including Drive Fault, Index, Drive Reset, and Index Homing parameters. A red box highlights the 'Distance Between Indexes' field, and a red arrow points to the 'Disable Index' checkbox in the 'Axis Y configuration' window.

Stepper drives do not support the INDEX signal

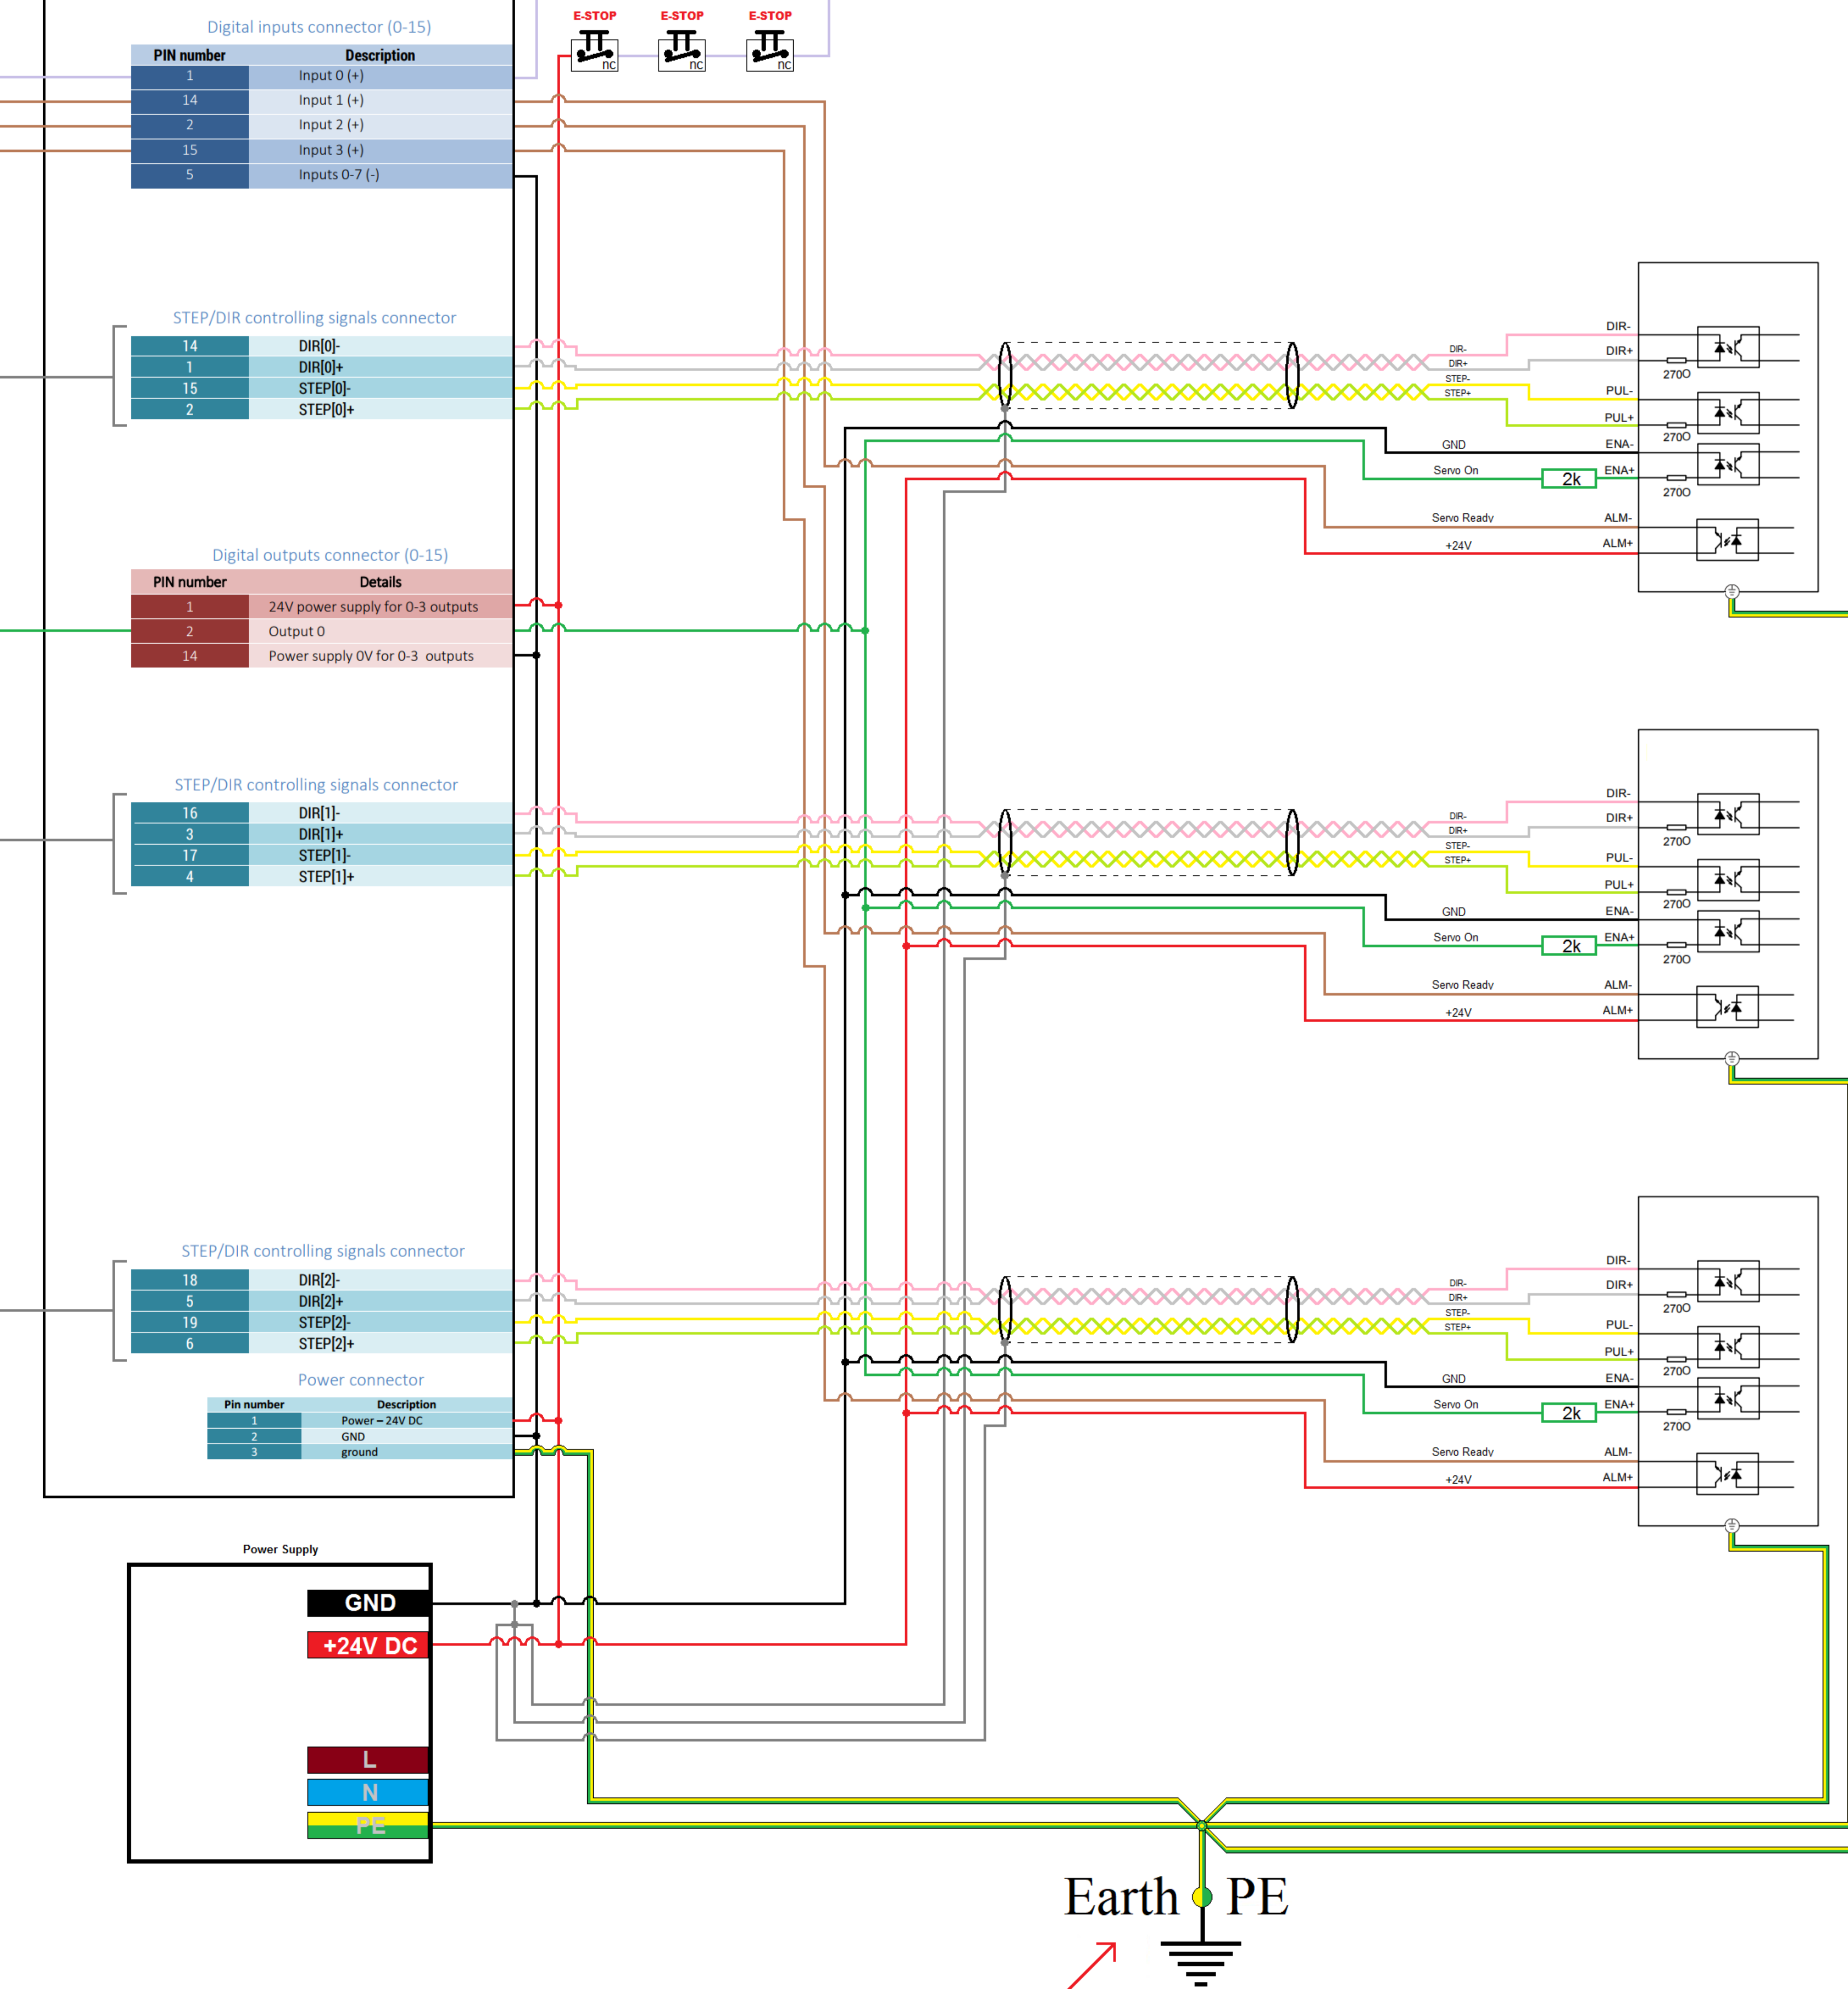

Earth Bars
Listwa uziemiająca